

2. Software Install

Edit New page

Alan Johnston edited this page 2 weeks ago · [36 revisions](#)

If the images on this page fail to load, you can [download a PDF of this page here..](#)

2. Software Install

Software needs to be installed on the Raspberry Pi Zero 2 and on the Raspberry Pi Pico W.

Note: You can run the software on the Pi Zero, but the Pi Zero 2 is recommended due to the CPU load of Command and Control. Note: You can run the Payload software on the Pico, but the Pico W is recommended as future features will make use the WiFi capability.

Raspberry Pi Zero 2 Software

There are two ways to get the CubeSatSim software for your Pi.

One option is to download the disk image file and write it to a 16GB or larger micro SD card. The image is based on Raspberry Pi OS (Rasbian) Lite, Bullseye (Legacy) version dated December 2023.

- ▼ Pages 147
 - Find a page...
 - ▶ Home
 - ▶ 1. Main Board 1
 - ▼ 2. Software Install
 - 2. Software Install
 - Raspberry Pi Zero 2 Software
 - Video
 - Checklist
 - Disk Image Option Steps
 - Logging into your Raspberry Pi
 - Wi-Fi login
 - Ethernet over USB
 - Changing the hostname
 - Installation Script Option Steps
 - Raspberry Pi Pico Software
 - Software installation
 - Viewing Software Logs
 - ▶ 3. Ground Station
 - ▶ 4. Main Board 2
 - ▶ 5. Battery Board

All the software is installed, you just need to login to change your password and set your amateur radio callsign if you have one. You can run the `update` script to update all packages and update and compile the latest CubeSatSim software.

The other option is to start with a Bullseye Raspberry Pi OS (Rasbian) image and run the installation script `install` which will install and compile all the related software.

Video

Here is a video showing how to install the software, although it shows the v1.2 software, the steps are the same except you will need to use the v2.0 image as the instructions show below: <https://youtu.be/swWasXBH7PU>

Checklist

The BOM has a sheet "By Steps" which lists the parts needed for each step in order. <http://cubesatsim.org/bom> If you have a Google account, you can make a copy of this spreadsheet ("File" then "Make a Copy") and check off each part as you install it.

For example, here is the checklist for this step:

- ▶ [6. Solar Board](#)
- ▶ [7. Solar Panels and Frame](#)
- ▶ [8. Board Stack](#)
- ▶ [9. Final Testing](#)
- ▶ [Adding New Sensors](#)
- ▶ [Command and Control](#)
- ▶ [Creating the CubeSatSim Raspberr...](#)
- ▶ [CubeSatSim Lite](#)
- ▶ [CubeSatSim Loaner User Guide](#)







Show 132 more pages...

+ Add a custom sidebar

Clone this wiki locally

<https://github.com/alanbjohnston>



<input type="checkbox"/>	Step 2. Software Install				https://github.com/alanbjo
<input type="checkbox"/>	Item		Qty	Location	Image
<input type="checkbox"/>	USB-C cable and power plug		1		
<input type="checkbox"/>	Alt 2a: Pi Zero WH (with pre-soldered headers)	<input checked="" type="checkbox"/>	1		
<input type="checkbox"/>	Alt 2b: Pi Zero W	<input type="checkbox"/>	1		
<input type="checkbox"/>	2x20 male header GPIO		1		
<input type="checkbox"/>	16GB micro SD Card with cubesatsim image		1		
<input checked="" type="checkbox"/>	Alt 1a: Pico WH with headers	<input checked="" type="checkbox"/>	1	Top	
<input type="checkbox"/>	Alt 1b: Pico W	<input type="checkbox"/>	1	Top	
<input type="checkbox"/>	Alt 1b: 20 pin male header for Pico		2	Top	

Disk Image Option Steps

You can write a pre-built Raspberry Pi disk image to your SD card. Your Pi then should boot up immediately and run the CubeSatSim software. You can configure a few settings, but it will run right away.

[Here are the steps we use to create the Raspberry image](#), so you can create your own if you want.

You will need a micro SD card with at least 16GB of capacity and a micro SD card writer and free software such as balenaEtcher:

<https://www.balena.io/etcher/> You will need to have administrator privileges on your computer in order to do this.

The image file is larger than 1GB, but with balenaEtcher you can write it from the URL without having to download it first. When you run balenaEtcher, select the Flash from URL option with this URL:


<http://cubesatsim.org/download/cubesatsim-v2.0.iso.zip> Here is the readme file for the

image:

<http://cubesatsim.org/download/cubesatsim-readme.pdf> Insert your micro SD card - the card

will be erased in the process of writing. Click on Select Target and select your SD card writer.


The Size shown here should match the size of your micro SD card.

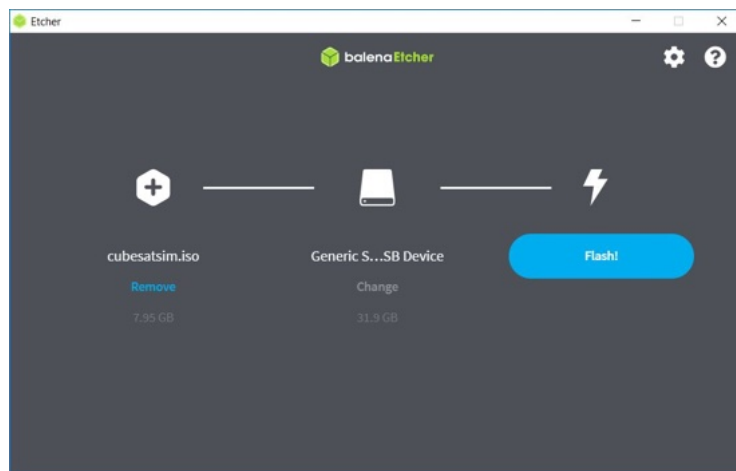


Then select Flash to begin writing. You will need to input your administrator password, then the write will begin. It will take a while.

Alternatively, you can first download the disk image by opening <http://cubesatsim.org/download/cubesatsim-v2.0.iso.zip> in your web browser, then choose the Flash from File option in balenaEtcher then select the image file you downloaded.

If your Raspberry Pi Zero 2 does not have the GPIO header pins installed, you will need to solder them in:


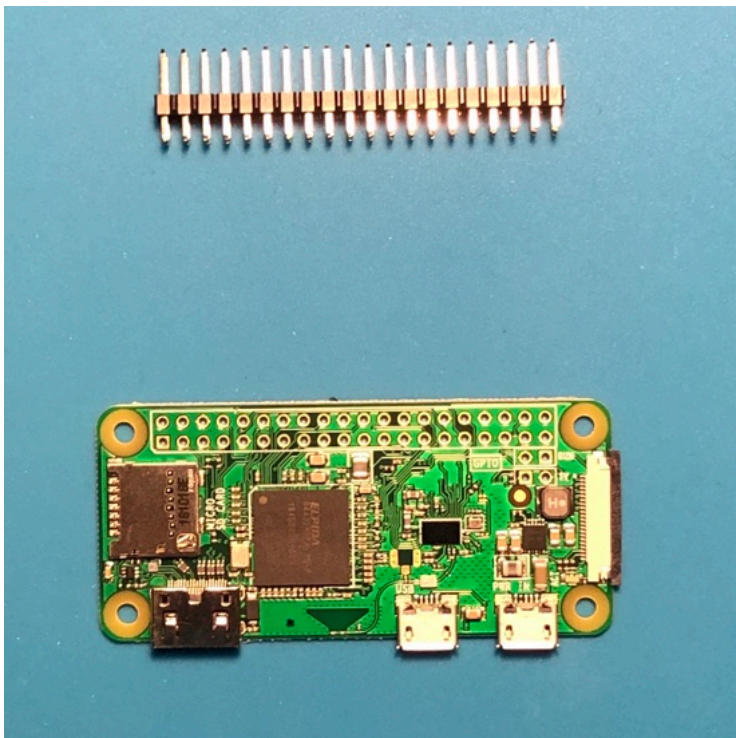


You can then insert the micro SD card in your Pi Zero 2:

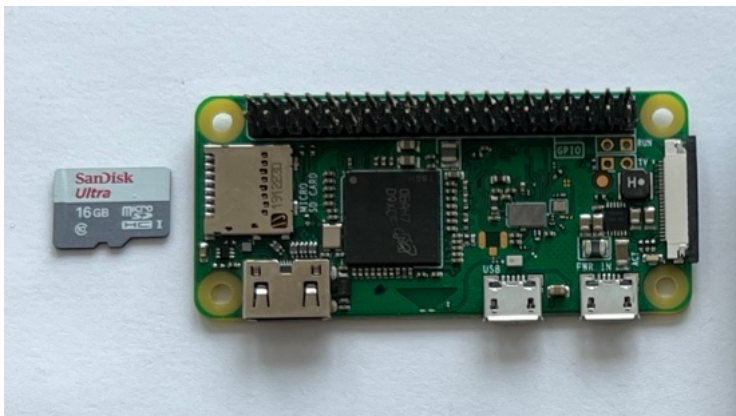


If you don't have your Main board, you can still test the software by plugging a micro USB cable into either micro USB connector on the Pi Zero 2. Without the Mainboard, it will only transmit the callsign in CW (Morse Code) once at the start. If you have a radio or ground station set up, you will hear it transmit at 434.9 MHz.


To fully test the software, plug your Pi Zero 2 into the Main board then plug the USB-C cable into the Main board. If you have your Main board built up to Step 1, you can plug the Pi Zero 2 into the bottom of the GPIO header.

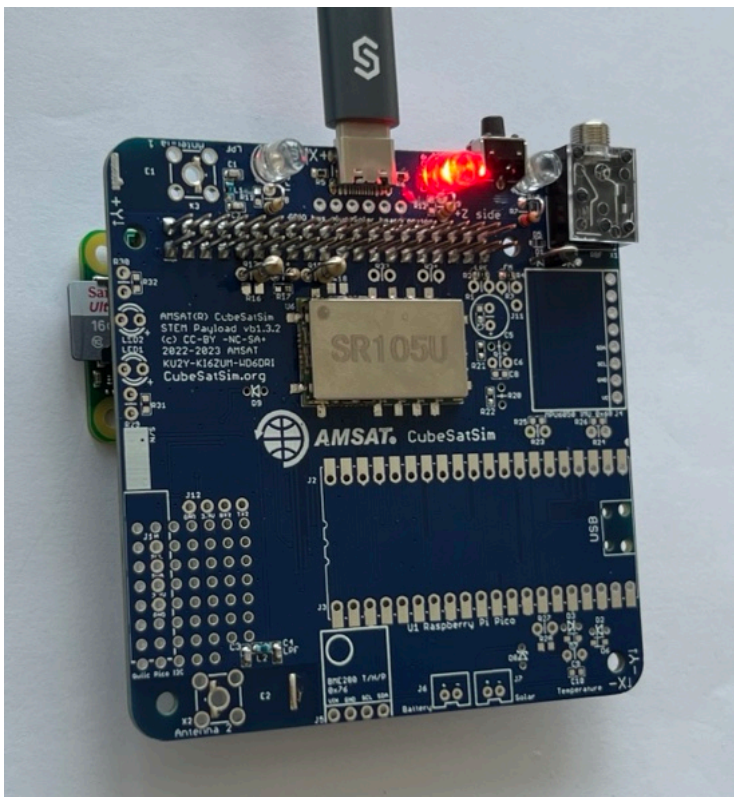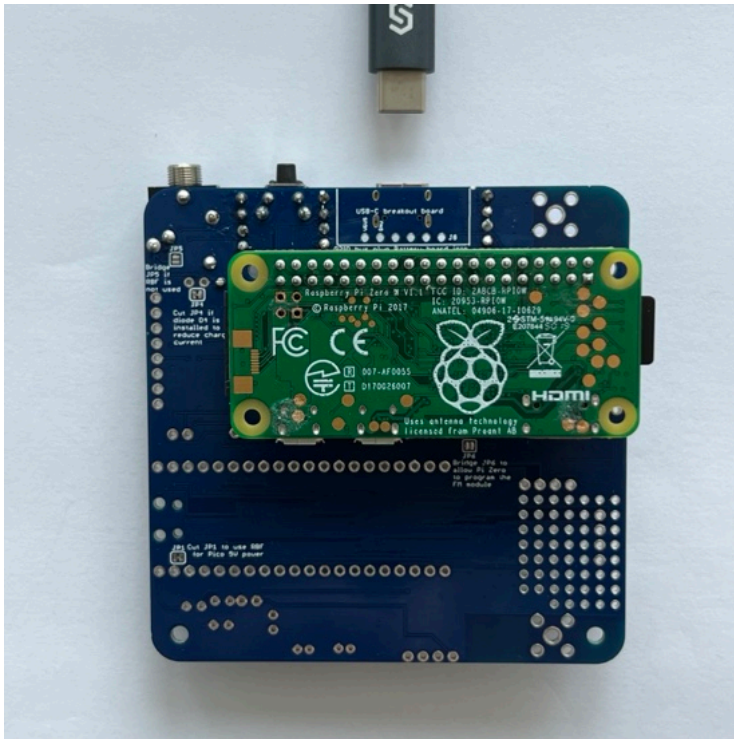

The red LED will immediately illuminate. After 30 seconds, the green LED will also illuminate. You will also see the tiny green LED on the Pi Zero 2 blink occasionally:

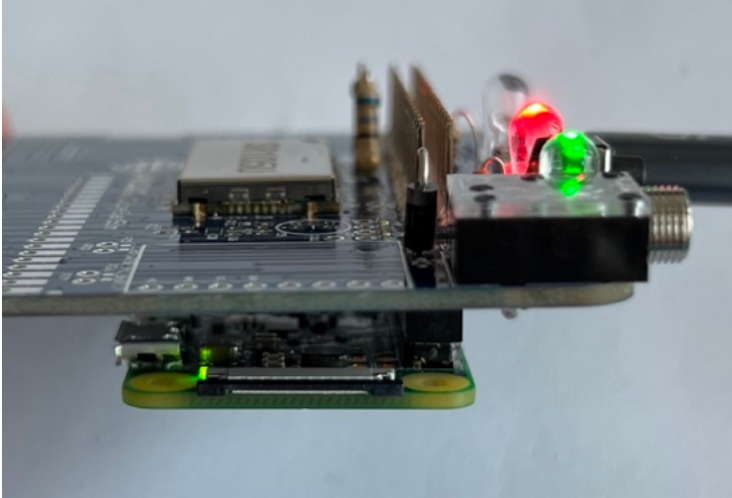

Then, the blue transmit LED will turn on.

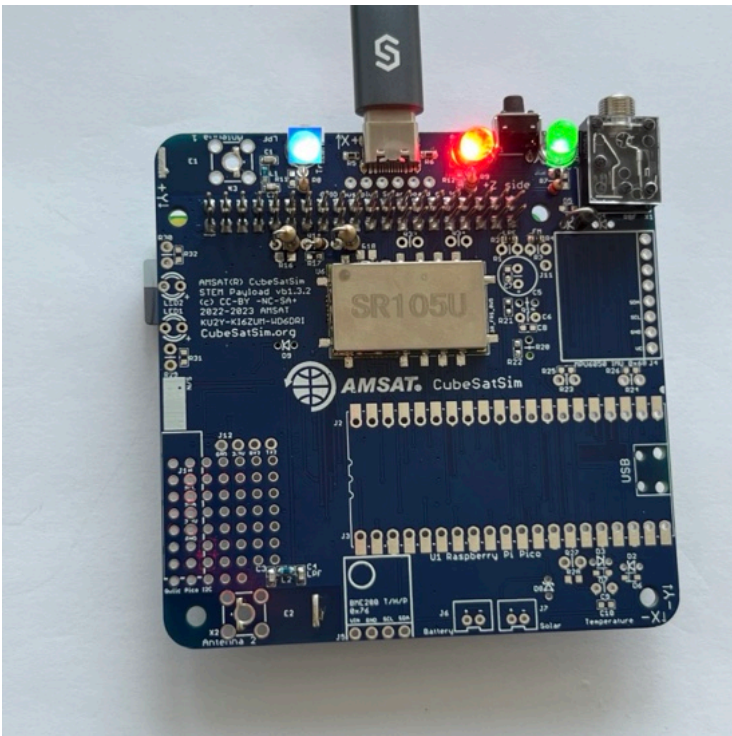

Logging into your Raspberry Pi

You can customize your software by logging into the Pi. If you have an HDMI monitor (and mini HDMI adapter or cable) and a USB keyboard (and micro USB to USB adapter or OTG cable), you can access the console directly.

Wi-Fi login

You will need to connect your Pi Zero 2 to your Wi-Fi so it can update the code from GitHub.

To get it on your Wi-Fi, follow these steps. First type this command:

```
sudo raspi-config
```

Then select `System Options` by hitting `Return`, then select `Wireless LAN` by hitting `Return` again. Then put your Wi-Fi name in the `SSID` field then hit `Return`, then type the Wi-Fi password then `Return` again. Hit the `Tab` key twice until `Finish` is highlighted, then hit `Return`. You may need to reboot. You can tell if you have Internet by typing:

```
timeout 10 ping amazon.com
```

If you see messages such as "64 bytes received" then you are online.

You can now update the Pi Zero 2 software by typing:

```
cd
```

```
CubeSatSim/update
```

You can also login remotely from your PC if it is on the same Wi-Fi as the Pi Zero. For example, in the Terminal Window or Windows Command Prompt, you can type:


```
ssh pi@cubesatsim.local
```

The first time you login, you will be prompted
Are you sure you want to continue connecting
(yes/no/[fingerprint])? Type yes then return to
continue, then type the password then return.
Note that the password will not be displayed as
you type it.

Ethernet over USB

If you don't connect your Pi Zero 2 to your Wi-Fi,
you can access your Pi from a computer using
just a USB cable. This Ethernet over USB service
is known as RNDIS on Windows and USB
Gadget on Linux.

On Mac or Linux, you don't need to install any
software to use this. On Windows, you need the
mDNS discovery program Bonjour. If you already
have iTunes installed, you should have it. If not,
you can download it from Apple here:

[https://support.apple.com/kb/dl999?
locale=en_US](https://support.apple.com/kb/dl999?locale=en_US)

Note that it is called Bonjour Printer Services,
since that is the most common standalone use
for the application. Run the installer and reboot.

On your Pi Zero 2, connect a micro USB cable to
the inner micro USB connector which is labeled
"USB", not the one on the edge labeled PWR IN
(Power In) as shown here:

(TBD)

When you connect the other end of the USB
cable to your computer, it will power up the Pi.
After a few moments, you will have network
connectivity to your Pi.

For example, in the Terminal Window or Windows Command Prompt, you can type:


```
ssh pi@cubesatsim.local
```

and you can login using the default password raspberry.

Sometimes, this doesn't work on Windows - if you are unable to connect after installing the software, try the steps described here:

<https://fredicraab.wordpress.com/cubesat-simulators/raspberrypi-zero-windows-10-rndis-driver-problems/>

Alternatively, you can use a free application such as PuTTY on Windows. Download it here <https://www.putty.org/> and open it, setting the Host Name to `cubesatsim.local` and then click Open to connect:

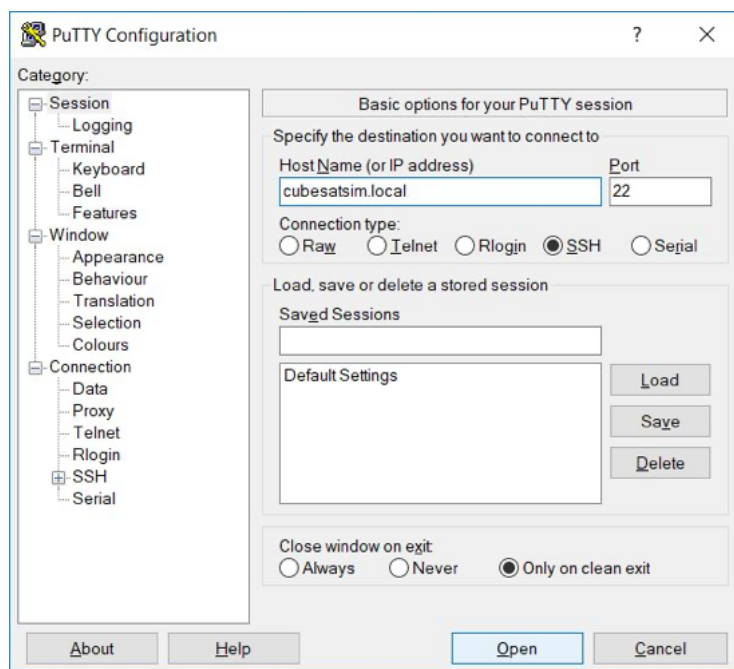

Here is how it looks when you login on Windows using PuTTY after entering the default password raspberry

```
pi@cubesatsim: ~
login as: pi
pi@cubesatsim.lan's password:
Linux cubesatsim 5.4.79+ #1373 Mon Nov 23 13:18:15 GMT 2020 armv6l

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.

This Raspberry Pi image has the CubeSatSim software installed and runs automatic
ally as systemd cubesatsim.service. For more information see https://CubeSatSim.
org. To update to the latest version, enter this command:

CubeSatSim/update.sh

Last login: Sun Feb  7 13:47:32 2021 from 192.168.8.243

SSH is enabled and the default password for the 'pi' user has not been changed.
This is a security risk - please login as the 'pi' user and type 'passwd' to set
a new password.

pi@cubesatsim:~$
```

You should set your amateur radio callsign which is transmitted as CW telemetry on 434.9 MHz (unless another frequency has been set using the `CubeSatSim/config -F` command) every time the CubeSatSim software starts up. You should edit the `CubeSatSim/sim.cfg` file to set your own callsign. You can also change localization settings or configure your local WiFi network by running `sudo raspi-config`.


The CubeSatSim software runs as a systemd service called `cubesatsim.service`. There is also a `transmit.service` which runs as well.

Changing the hostname


If you want to change the hostname from `cubesatsim`, you can run `raspi-config` by typing this command:

```
sudo raspi-config
```


You will see menu like this:

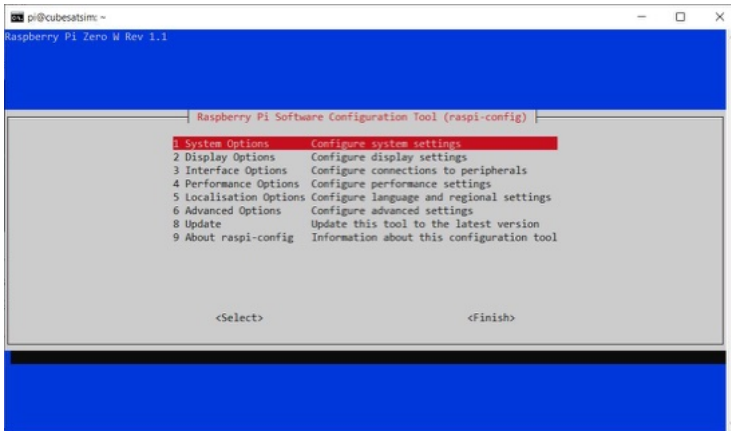


Hit the Enter key to select the System Options (or use the up and down arrows if you are on a different option). You will then see:

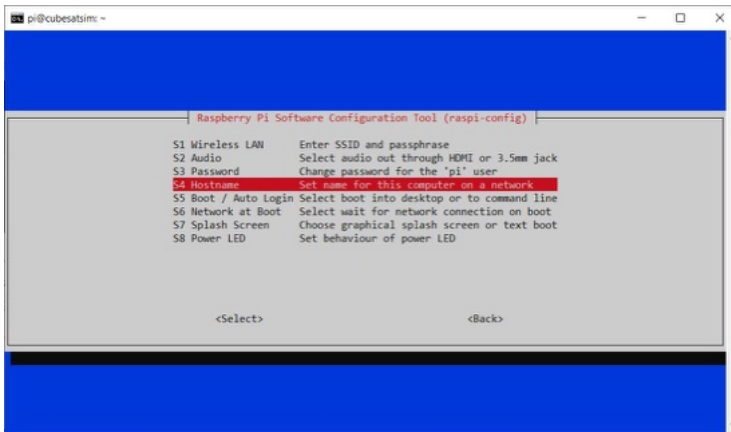


Use the down arrow to select Hostname then hit Enter. You will then see this message saying what characters can be used:

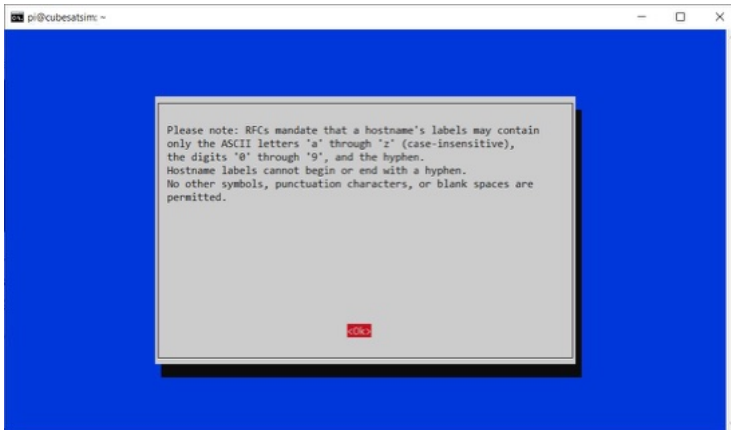

Hit the Enter key to continue:

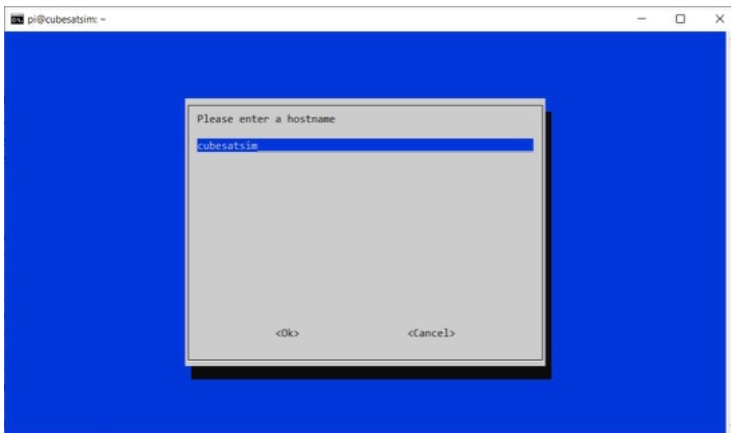

Now enter your chosen hostname then hit Enter or use the down arrow to select the OK button then hit Enter.

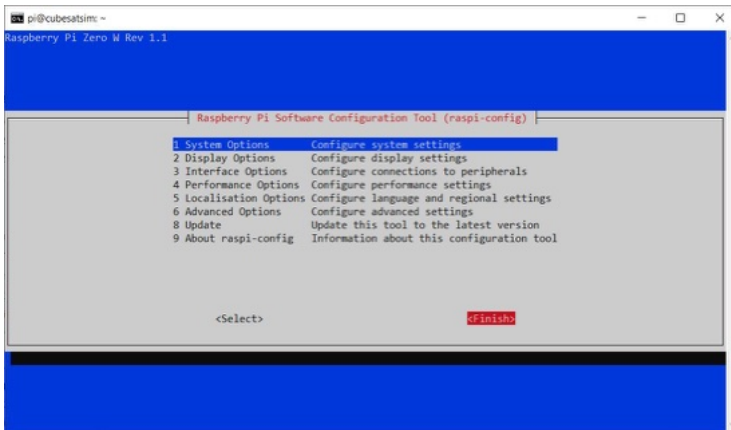

Use the right arrow to select the Finish button then hit Enter:



Hit Enter to select Yes to reboot. When the Pi reboots in about 30 seconds, you will need to ssh using your new hostname.

Installation Script Option Steps

You can start with the Bullseye version of Raspberry Pi OS. A Pi Zero or Pi Zero W should only run Lite while a Pi Zero 2 can run the Desktop. Make sure you create a user `pi` and do the install with that user or there may be issues with configuration files and settings as it references many paths in `/home/pi/*`. Your Pi will need to have internet access to update settings and install packages.

To get the software follow these steps:

```
sudo apt-get update && sudo apt-get dist-upgrade -y
```

```
sudo apt-get install -y git
```

```
git clone  
http://github.com/alanbjohnston/CubeSatSim.git
```

```
cd CubeSatSim
```

You are now ready to install the software.

```
./install
```


You will be prompted for your amateur radio callsign. If you don't have one or just hit Return, the default AMSAT will be used. The Callsign is transmitted as a CW ID (Morse code) each time the CubeSatSim software starts up.

The installation script will run for quite a while. It will prompt you if you want to modify `/boot/config.txt` file. Type a `y` and the script will complete. You will need to reboot.


Raspberry Pi Pico Software

These instructions are for the CubeSatSim software for the Raspberry Pi Pico processor.

You will need a Raspberry Pi Pico W (a Pico works as well but doesn't have WiFi for future features) and either a micro USB cable:

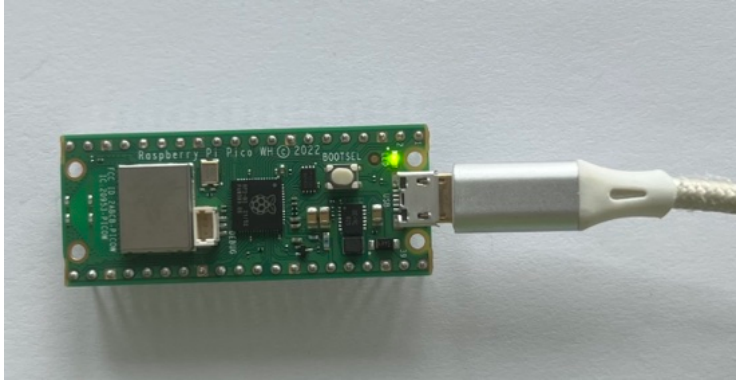

Or a USB-C cable with a micro USB adapter:

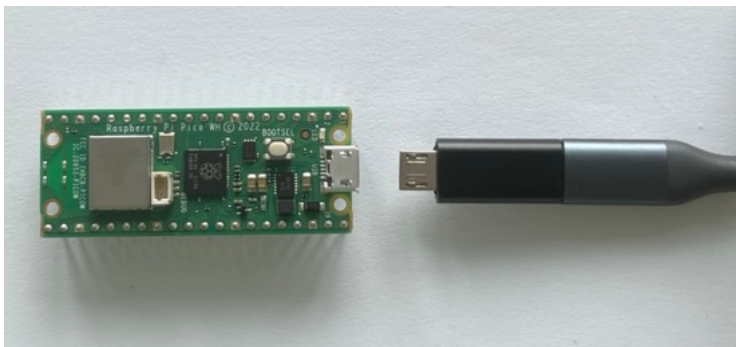

They include how to install the software, check the software log, and do various debugging.

Software installation

You will need:

- Raspberry Pi Pico or Pico W microcontroller
- micro USB cable to connect to your computer
- Computer with Arduino IDE running

The simplest way is to install the software image, as described below. If you want to compile the Pico code yourself and make modifications or add sensors, Here's how to [compile the code and add more sensors](#).

Here are the steps to install the software image:

- Download the UF2 file with the latest software from here onto your computer: Go to <https://github.com/alanbjohnston/CubeSatSim/releases/> and select the latest one. In the notes for the release, you will find a link to the .UF2 file (it is also in the Assets, but you have to click on it to see it). Download the UF2 file
- While holding down the BOOTSEL button (white button on the Pico) plug your Raspberry Pi Pico or Pico W into your computer using the micro USB port
- It should mount as a flash drive called RPI-RP2. Drag the .UF2 file you downloaded previously to the Pico flash drive
- After a few seconds, the LED on the Pico should flash on and off about the once per second.

Viewing Software Logs


The software continuously writes a log file to the serial port. You can view it on a Computer with the Arduino IDE by running the Serial Monitor.

The board selected doesn't really matter. It could be the Raspberry Pi Pico or Pico W if you have it installed. If you don't, you could just select the Arduino Uno board.

You will need to select the Port after you plug the Pico in with the micro USB cable to your computer.

Click on the Serial Monitor icon to open it. You should set the baud rate to 115200 using the drop down menu.

Here's what you will see from the start when the Pico boots up not plugged into anything (the version number may be slightly different):

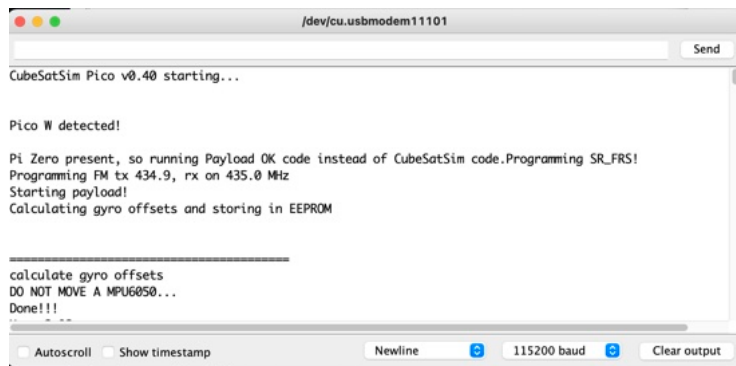

```
CubeSatSim Pico Payload v0.2
starting...
```



```
Pico W detected!
```

```
Pi Zero present, so running Payload OK
code instead of CubeSatSim
code. Programming SR_FRS!
```

```
Starting payload!
Calculating gyro offsets and storing
in EEPROM
```

```
=====
calculate gyro offsets
DO NOT MOVE A MPU6050...
Done!!!
X : -2.92
Y : -0.64
Z : -4.18
Program will start after 3 seconds
=====
/payload.cfg file
```

```
Writing string
-3.027673 5.815880 -1.333720
OK BME280 26.15 991.59 181.94 31.96
MPU6050 -0.07 0.00 0.04 -0.00 -0.06
0.98 XS2 0.0000 0.0000 0.00 MQ 170
Squelch: 1
OK BME280 26.15 991.62 181.65 31.87
MPU6050 -0.07 -0.33 0.04 0.00 -0.06
0.99 XS2 0.0000 0.0000 0.00 MQ 170
Squelch: 1
OK BME280 26.15 991.63 181.56 31.83
MPU6050 0.16 -0.18 0.02 0.00 -0.06
0.99 XS2 0.0000 0.0000 0.00 MQ 170
Squelch: 1
```

If you see this, you have successfully installed the CubeSatSim software on the Raspberry Pi Pico processor.

Next step is to [setup your Ground Station](#).

+ Add a custom footer